

DS 4000 T Brushcutter



Documents

Engine

Starter assy and clutch

Tank and air filter

Transmission

Carburettor WT-1099

Accessories

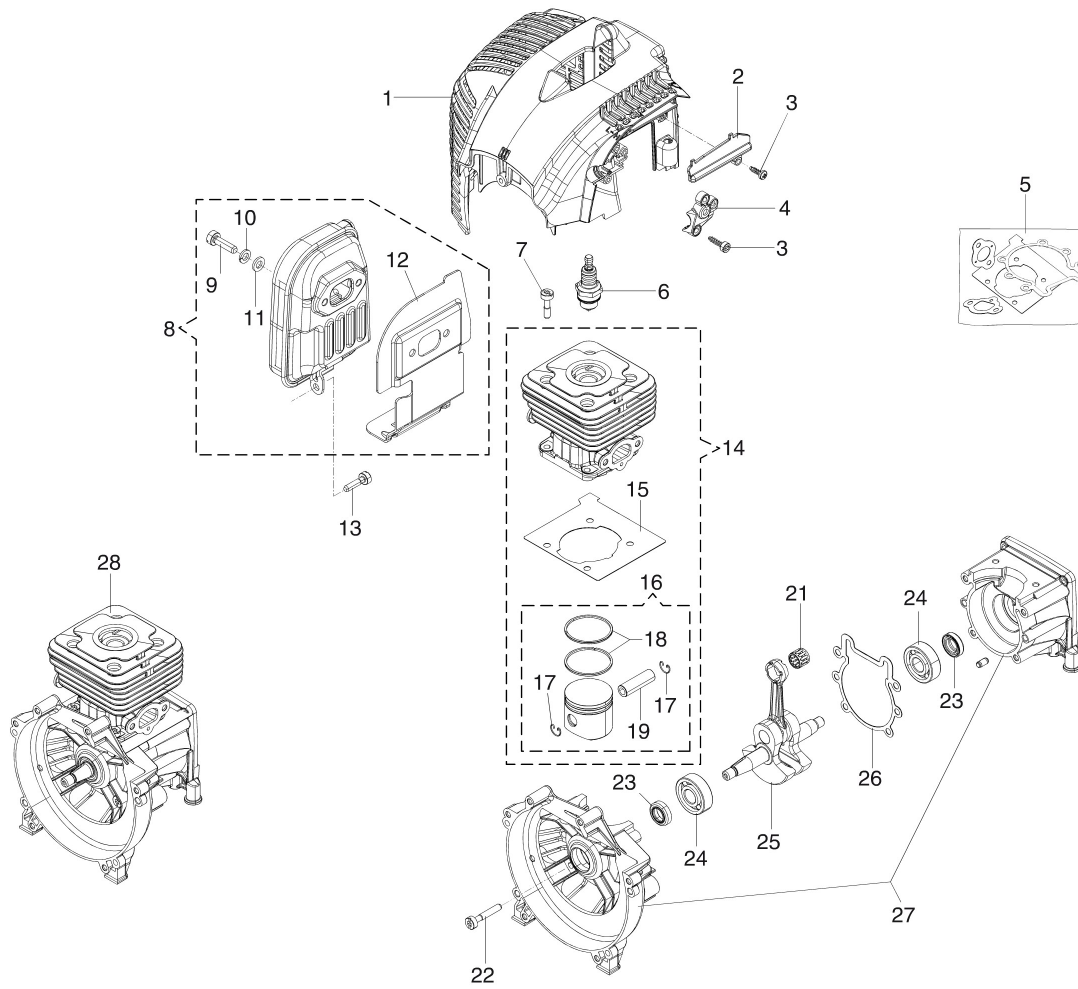


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61382021R	Engine cover				
2	1	61380050R	Cover				
3	4	3960087AR	Screw				
4	1	61250250R	Stopper				
5	1	61202038BR	Gasket set				
6	1	3055118	Spark plug				
7	4	3891048R	Screw				
8	1	61422017R	Muffler assy				
9	2	3891086R	Screw				
10	2	3819010R	Washer				
11	2	3916006R	Washer				
12	1	61380036AR	Deflector				
13	1	3891048R	Screw				
14	1	61350209C	Complete cylinder Ø42				
15	1	61350272R	Gasket				
16	1	61350208	Piston assy Ø42				
17	2	007201198R	Ring				
18	2	50070128R	Piston ring Ø42				
19	1	61350174R	Piston pin				
21	1	3037014R	Bearing				
22	4	3891057R	Screw				
23	2	094000099R	Seal ring				
24	2	094000006R	Bearing				
25	1	61350177BR	Crankshaft				
26	1	61200006AR	Gasket				
27	1	61350346	Crankcase assy				
28	1	61352061ER	Short block				

Illustration Starter Assy and clutch

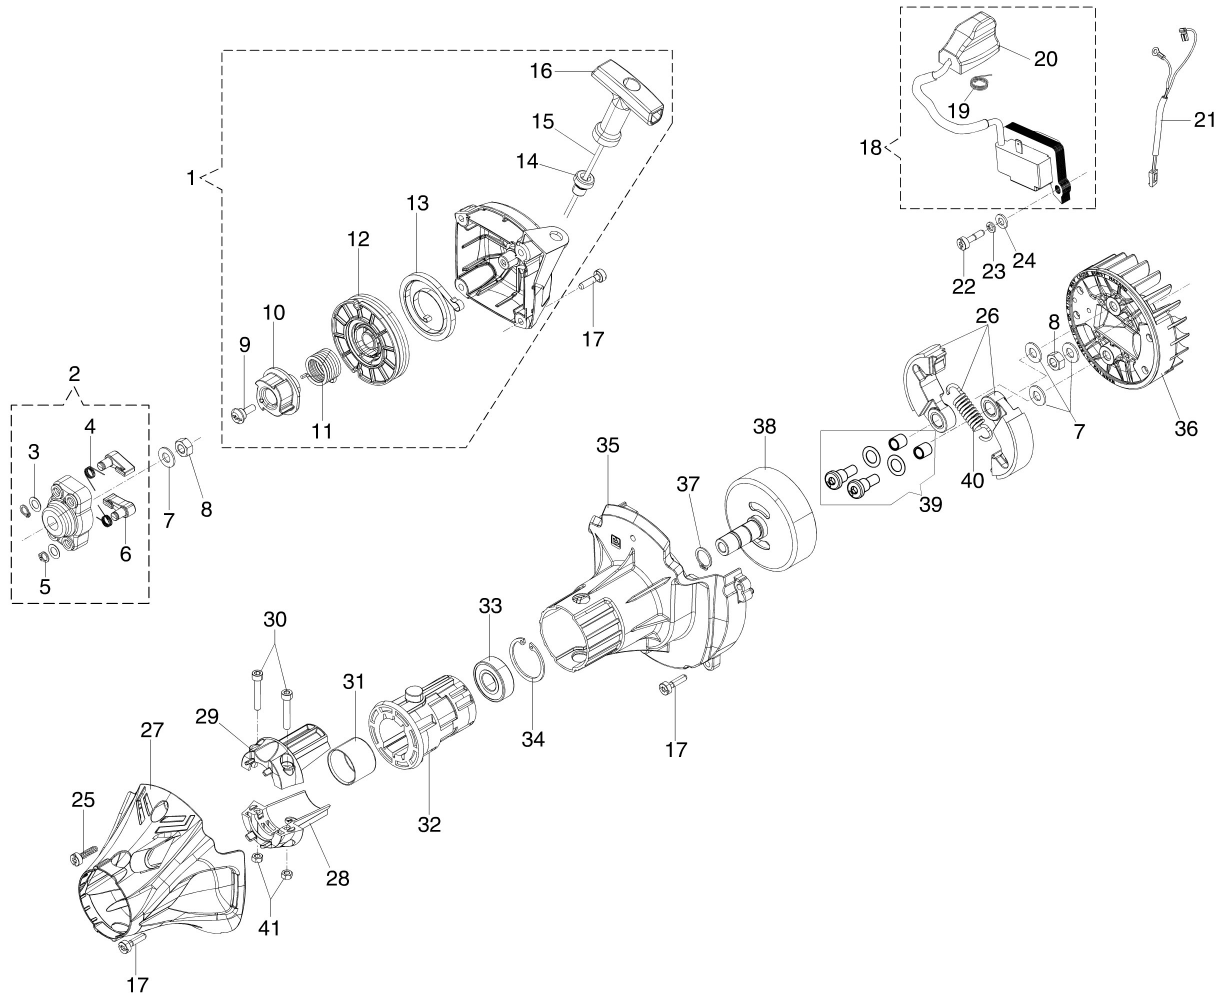


Illustration Starter assy and clutch

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61422013R	Starter assy				
2	2	61350142	Clutch driver				
3	2	3064010R	Washer				
4	2	4191017A	Spring				
5	2	3024007R	Ring				
6	2	61350145R	Pawl				
7	4	3818011AR	Washer				
8	2	3912009	Nut				
9	1	61350342R	Screw				
10	1	61350204AR	Sprocket				
11	1	61350203BR	Spring				
12	1	61350139R	Starter pulley				
13	1	004000132R	Spring				
14	1	072700089R	Bushing				
15	1	4098073R	Starter rope				
16	1	61200015R	Starter handle				
17	9	3891048R	Screw				
18	1	2501006AR	Ignition coil				
19	1	50050127	Spring				
20	1	61380060R	Spark plug cap				
21	1	61250282AR	Cable				
22	2	3891046R	Screw				
23	2	3819006R	Washer				
24	2	3916006R	Washer				
25	1	3893060R	Screw				
26	1	4191153BR	Clutch				
27	1	61420022R	Cover				
28	1	61250020AR	Clamp				
29	1	61250019AR	Clamp				
30	2	3801016R	Screw				
31	1	4196038R	Bushing				
32	1	61250023AR	Sleeve				
33	1	3035042R	Bearing				
34	1	3025022R	Ring				
35	1	61430036R	Starter case				
36	1	61250014AR	Flywheel				
37	1	3024015R	Ring				
38	1	4191030R	Clutch drum				
39	2	61420020	Fitment system		SN 2467429999		BT3-136-11/17
40	1	4191028R	Spring				
41	2	3914003R	Nut				

Illustration Tank and air filter

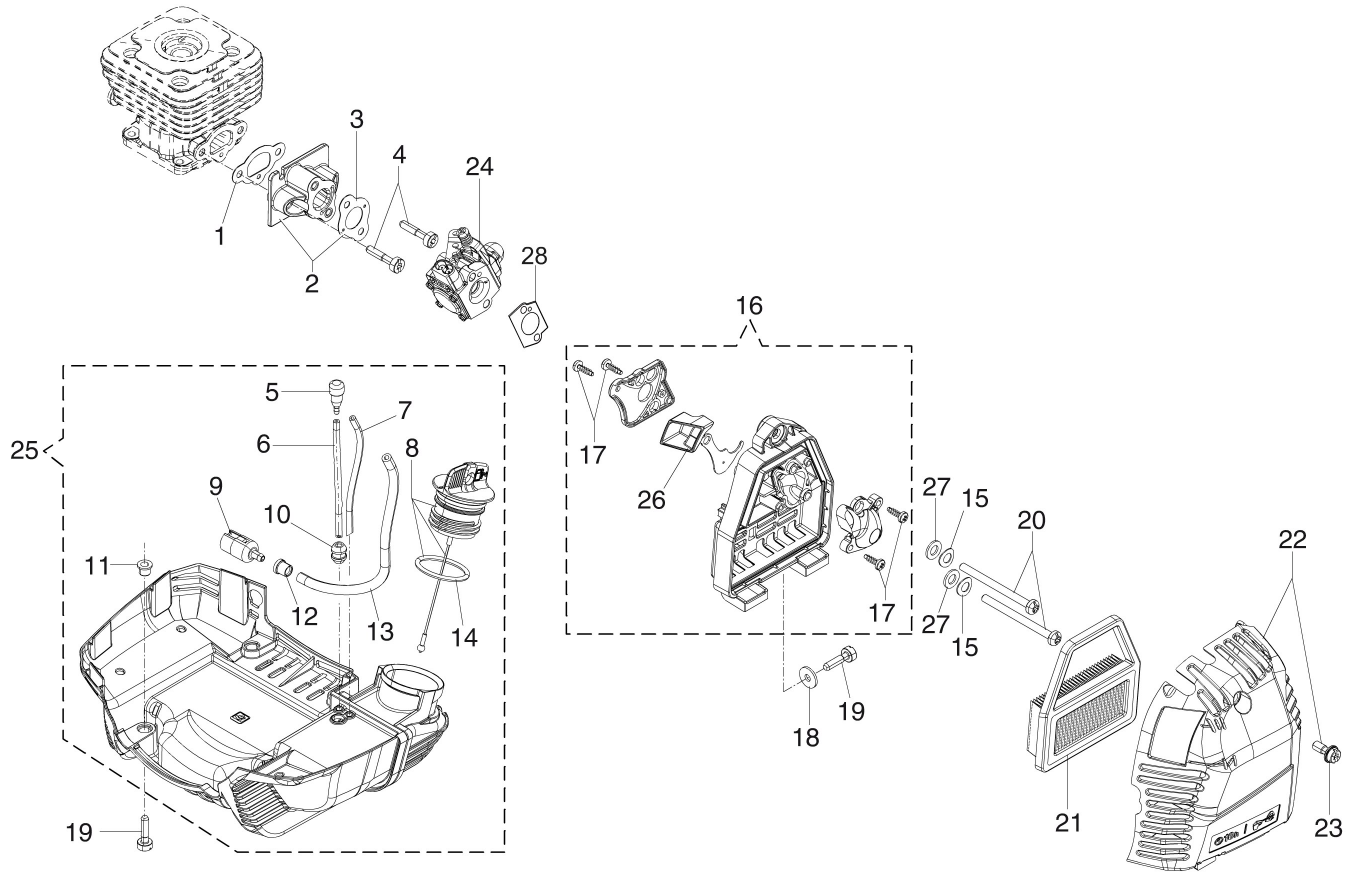


Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200019AR	Gasket				
2	1	61200198	Insulator				
3	1	61200196AR	Gasket				
4	2	3891050R	Screw				
5	1	61070011AR	Breather valve				
6	1	61380111R	Breather fuel pipe				
7	1	61380112R	Tube				
8	1	61380100	Tank cap				
9	1	094600450R	Fuel filter				
10	1	4161211R	Bush				
11	4	61380017R	Spacer				
12	1	61110162BR	Bushing				
13	1	3073020R	Tube				
14	1	3049024R	Gasket				
15	2	3833073R	Washer				
16	1	61382040AR	Air filter support set				
17	4	3960087AR	Screw				
18	1	3918005R	Washer				
19	5	3891048R	Screw				
20	2	3891067R	Screw				
21	1	61380013AR	Air filter				
22	1	61380099	Air filter cover				
23	1	61330040AR	Screw				
24	1	2318987R	Carburetor WT-1099				
25	1	61420008R	Complete tank				
26	1	61380074AR	Starter lever				
27	2	3916005R	Washer				
28	1	61350155R	Flange				

Illustration Transmission

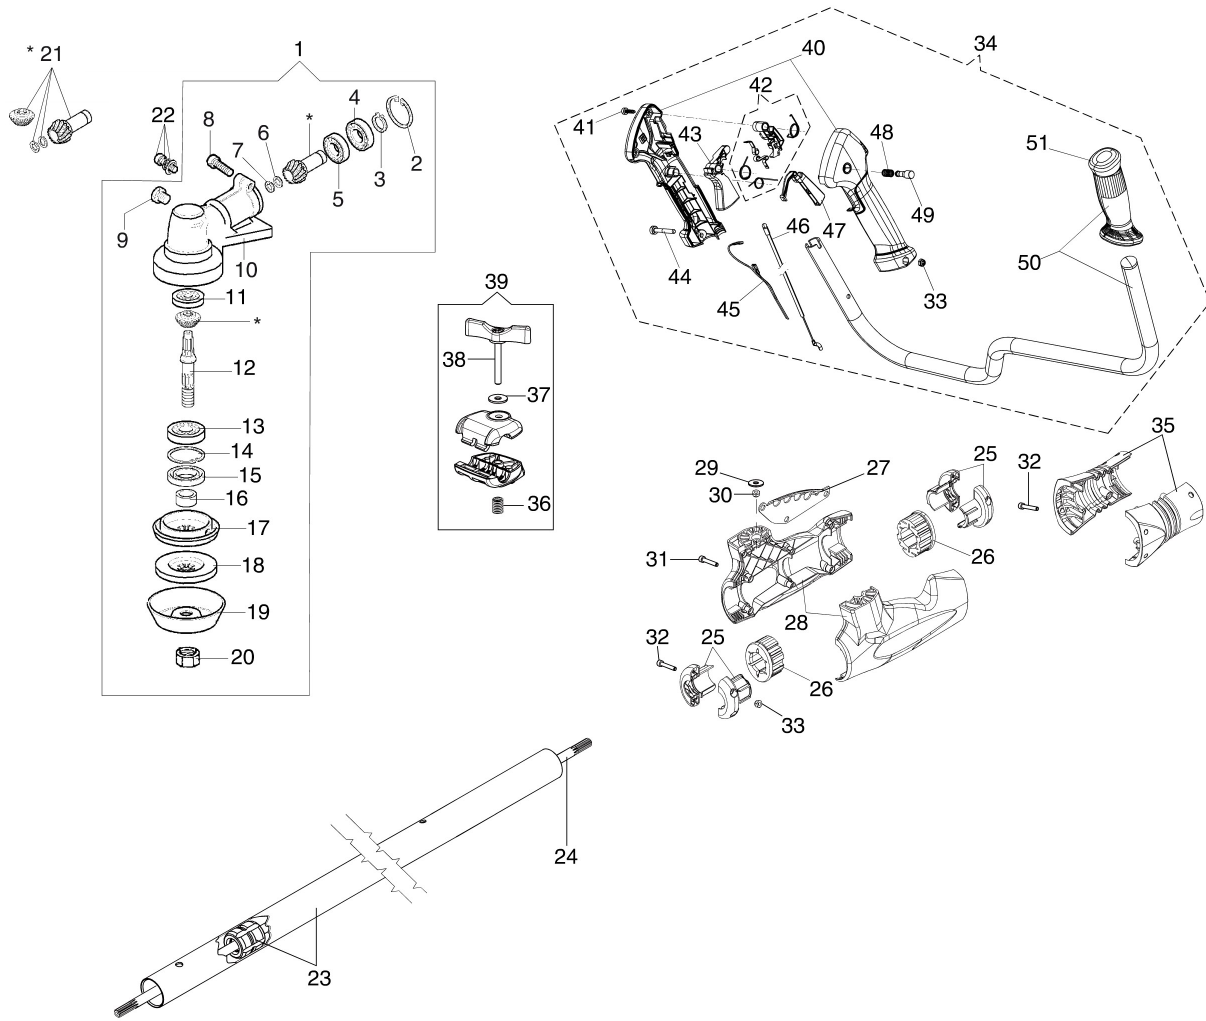


Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61350149AR	Bevel gear Ø28				
2	1	3025019	Ring				
3	1	3024012R	Snap ring				
4	1	3035023R	Bearing				
5	1	3034019R	Bearing				
6	1	4138311A	Ring				
7	1	3025009	Ring				
8	1	3901016	Screw				
9	1	61040071R	Cap				
10	1	61040144R	Gear case				
11	1	3034218R	Bearing				
12	1	61250054R	Pin				
13	1	3034012R	Bearing				
14	1	3025022R	Ring				
15	1	3050018R	Seal ring				
16	1	61040066R	Spacer				
17	1	61040145R	Hub				
18	1	4179089R	Flange				
19	1	61110074R	Guard				
20	1	61110075R	Nut				
21	1	61350216	Bevel gear set				
22	1	3901008R	Screw				
23	1	61252049R	Tube Ø28				
24	1	61202109R	Shaft				
25	4	61040110R	Clamp				
26	2	61250181R	Sleeve				
27	1	61250180R	Plate				
28	1	61420041	Motor housing				
29	1	66030012R	Washer				
30	1	3980011	Nut				
31	8	3960091AR	Screw				
32	1	3801016R	Screw				
33	1	3914003R	Nut				
34	1	61420039	Complete handle				
35	1	61420042	Compl. cover				
36	1	61040044R	Spring				
37	1	3918013R	Washer				
38	1	61042030R	Knob				
39	1	61370274A	Complete clamp				
40	1	61380097	Pair of handles				
41	3	3893016AR	Screw				
42	1	61370294	Lever group				

Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
43	1	61380064R	Throttle lever				
44	1	3891054R	Screw				
45	1	61420025R	Cable				
46	1	61420024R	Throttle cable				
47	1	61370114R	Lever				
48	1	4100098BR	Spring				
49	1	56550185R	Button				
50	1	61382024R	Handle and knob				
51	1	61040140R	Knob				

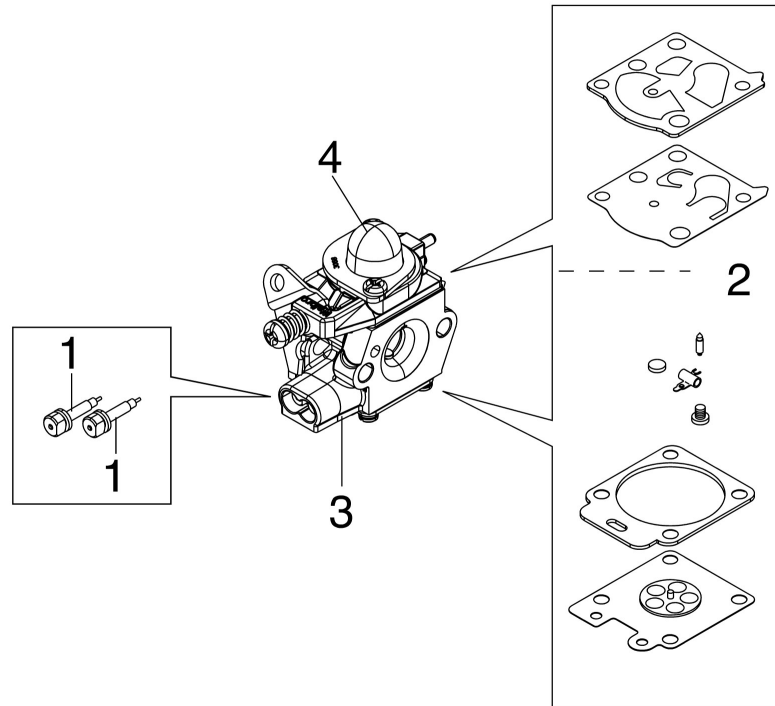


Illustration Carburettor WT-1099

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	2318667R	Adjust. screw				
2	1	2318671	Repair kit				
3	1	2318987R	Carburetor WT-1099				
4	1	2318572	Primer pump				

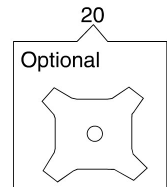
 
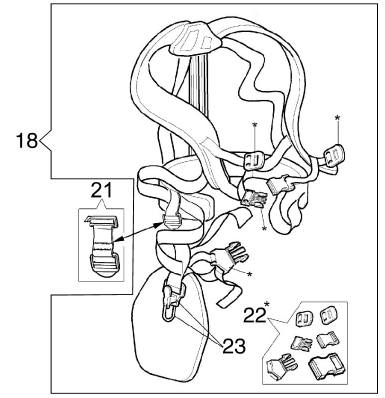
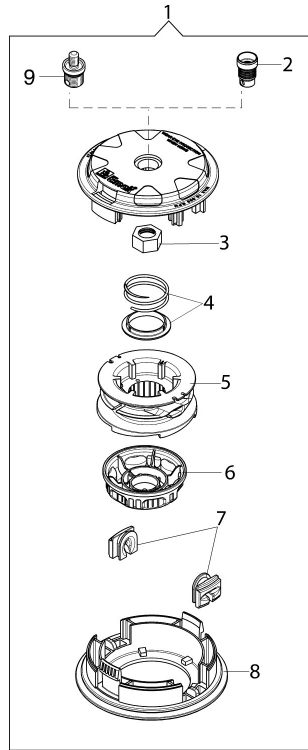
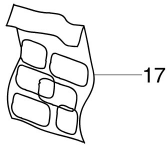
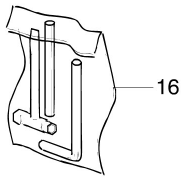
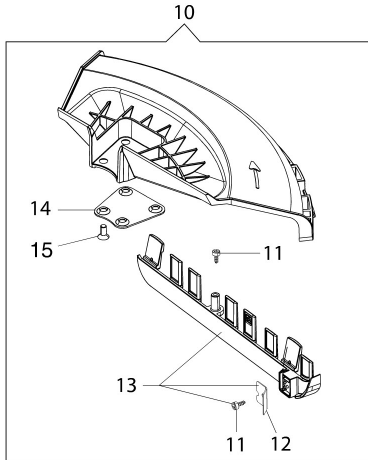


Illustration Accessories

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63129007	Load & Go nylon head				
2	1	63120041R	Insert				
3	1	63120040R	Nut				
4	1	63120031R	Kit spring				
5	1	63120020AR	Nylon spool				
6	1	63120007AR	Knob				
7	2	63120001R	Bushing				
8	1	63120005R	Cover				
9	1	63120042R	Insert (male)				
10	1	61380124	Disc guard				
11	2	3960040R	Screw				
12	1	4174275R	Blade				
13	1	61380126	Skirt w/blade				
14	1	4174278R	Plate				
15	4	3802004DR	Screw				
16	1	61052031R	Tool kit				
17	1	61420037	Labels kit				
18	1	63070002AR	Harness				
19	1	4095673BR	3-tooth blade				
20	1	4095681AR	4-tooth blade				
21	1	63070039R	Hook				